

MIB MASTER-BILT[®] *Refrigeration Solutions*

Deluxe Ice Cream Dipping/Display Merchandisers



DD-46, 66, 88 LCG

Installation & Operations Manual

ControlTec TLY25

Master-Bilt Products
908 Highway 15 North
New Albany, MS 38652
Phone: (800) 684-8988

Rev 6-10-11

TABLE OF CONTENTS

INTRODUCTION	4
STORE CONDITIONS	4
WARNING LABELS AND SAFETY INSTRUCTIONS	5
PRE-INSTALLATION INSTRUCTIONS	5
Inspection for Shipping Damage.....	5
INSTALLATION INSTRUCTIONS	6
General Instructions.....	6
Electrical.....	6
Mechanical.....	7
Startup.....	7
ControlTec Electronic CONTROL	8-9
CLEANING INSTRUCTIONS	10
Can Holder Cleaning.....	10
Frost Shield Cleaning.....	10
OPERATION CONDITIONS AND PRESSURES	11
SERVICE INSTRUCTIONS (Trouble Shooting)	11
MASTER-BILT PART NUMBERS	12
ACCESSORIES	13
SALE AND DISPOSAL	13
WIRING DIAGRAMS	14-15

INTRODUCTION

Thank you for purchasing a Master-Bilt cabinet. This manual contains important instructions for installing, using and servicing a Master-Bilt **DD_LCG** case. A parts list is included in with this manual. Read all these documents carefully before installing or servicing your equipment.

STORE CONDITIONS

The Master-Bilt **DD_LCG** cases are designed to operate in the controlled environment of an air-conditioned store. The store temperature should be at or below 75°F and a relative humidity of 55% or less. At higher temperature or humidity conditions, the performance of these cases may be affected and the capacity diminished. It is not uncommon in a newly constructed store for the temperature and humidity to be above design conditions. These excessive conditions may produce sweating in the case until the store is operational and the ambient environment is more desirable.

The Master-Bilt **DD_LCG** should not be positioned where it is directly exposed to rays of sun or near a direct source of radiant heat or airflow. This will adversely affect the case and will result in poor performance.



NOTICE

Read this manual before installing your cabinet. Keep the manual and refer to it before doing any service on the equipment. Failure to do so could result in personal injury or damage to the cabinet.



DANGER

Improper or faulty hook-up of electrical components of the refrigeration units can result in severe injury or death.

All electrical wiring hook-ups must be done in accordance with all applicable local, regional or national standards.



NOTICE

Installation and service of the refrigeration and electrical components of the cabinet must be performed by a refrigeration mechanic and/or a licensed electrician

The portions of this manual covering refrigeration and electrical components contain technical instructions intended only for persons qualified to perform refrigeration and electrical work.

This manual cannot cover every installation, use or service situation. If you need additional information have the serial number at hand and call or write us:

Customer Service Department

Master-Bilt Products

Highway 15 North

New Albany, MS 38652

Phone (800) 684-8988

Fax (800) 684-8988

WARNING LABELS AND SAFETY INSTRUCTIONS



This symbol is the safety-alert symbol. When you see this symbol on your cabinet or in this manual, be alert to the potential for personal injury or damage to your equipment.

Be sure you understand all safety messages and always follow recommended precautions and safe operating practices.



NOTICE TO EMPLOYERS

You must make sure that everyone who installs, uses or services your cabinet is thoroughly familiar with all safety information and procedures.

Important safety information is presented in this section and throughout this section and throughout the manual. The following signal words are used in the warnings and safety messages:


DANGER: Severe injury or death will occur if you ignore the message.

WARNING: Severe injury or death can occur if you ignore the message.


CAUTION: Minor injury or damage to your cabinet can occur if you ignore the message.

NOTICE: This is important installation, operation or service information. If you ignore the message, you may damage your cabinet.

The warning and safety labels shown throughout this manual are placed on your Master-Bilt Products cabinet at the factory. Follow all warning label instructions. If any warning or safety labels become lost or damaged, call your customer service department at (800) 684-8988 for replacements.

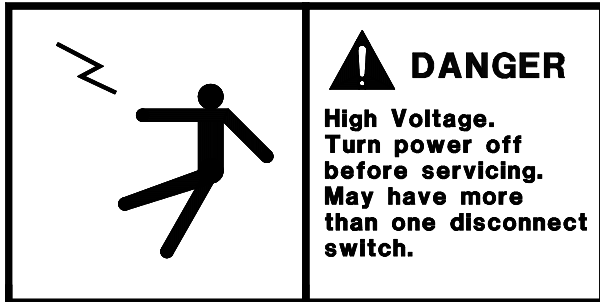

This label is located on top of the electrical control label and on the wiring channel.

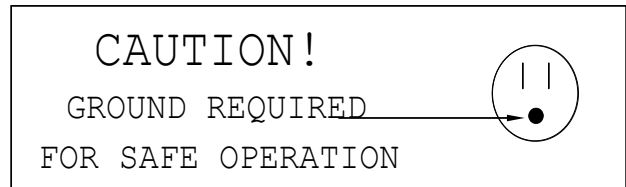

This label is attached to the cabinet power cord on models with a power cord.

PRE-INSTALLATION INSTRUCTIONS

INSPECTION FOR SHIPPING DAMAGE

You are responsible for filing all freight claims with the delivering truck line. Inspect all cartons and crates for damage as soon as they arrive. If damage is noted to shipping crates or cartons or if a shortage is found, note this on the bill of lading (all copies) prior to signing.

If damage is discovered when the cabinet is uncrated, immediately call the delivering truck line and follow up the call with a written report indicating concealed damage to your shipment. Ask for an immediate inspection of your concealed damage item. Crating material must be retained to show the inspector from the truck line.

INSTALLATION INSTRUCTIONS

GENERAL INSTRUCTIONS

1. Be sure the equipment is properly installed by competent service people.
2. Keep the equipment clean and sanitary so it will meet your local sanitation codes.
3. Rotate your stock so that older stock does not accumulate. This is especially important for ice cream. A "First-In, First-Out" rotation practice will keep the products in good salable condition.
4. Do not place product in the case when it is soft or partially thawed. Also, product should not be put in the case for at least 6 hours after it is started.
5. Stock cases as quickly as possible, exposing only small quantities to store temperatures for short periods of time.
6. When replacing burned out fluorescent tubes, be sure that the electrical power to the lighting circuit is turned off.

NOTICE TO STORE OWNERS / MANAGERS

Moisture or liquid around or under the cabinet is a potential slip/fall hazard for persons walking by or working in the general area of the cabinet. Any cabinet malfunction or housekeeping problem that creates a slip/fall hazard around or under the cabinet should be corrected immediately.

If moisture or liquid is observed around or under a Master-Bilt cabinet, an immediate investigation should be made by qualified personnel to determine the source of the moisture or liquid. The investigation should determine if the cabinet is malfunctioning or if there is a drainpipe leaking.

ELECTRICAL



WARNING

Before servicing electrical components in the case, make sure all power to case is off. Always use a qualified technician.

MECHANICAL

Remove grille and check refrigeration lines to see that they are free (not touching each other or compressor). Spin condenser fan blade to see that it is free.

Check that all service valves are open. The picture below is Master-Bilt's standard DD-Unit. The compressor is hermetic, it is internally spring mounted and ready to run.



Hermetic Compressors

Remove cabinet from crate base and slide into location. Cabinet must be level from side to side and front to back.

To comply with Sanitation requirements the cabinet must be mounted on legs (6" high min.) or casters or the base must be sealed to the floor with an N.S.F. listed silicone sealant.

STARTUP

Uncoil the lead cord and pass it through the hole provided in the grill. While the cabinet is in operation, check the voltage draw and the amperage draw versus this rating on the nameplate. Voltage should be checked at the compressor terminals while the compressor is initially starting. The unit is designed to operate at +/- 10% of 115 volts, 60 cycle, single phase. This means that the voltage should be between 103 and 126.5 volts.

A separate 20 amp. fuse circuit for each cabinet is recommended to avoid the possibility of other appliances on a circuit from overloading and causing a malfunction. Make sure that the electrical service is grounded upon installation.

MASTER-BILT ELECTRONIC REFRIGERATION CONTROL (TLY25/Y39)

GENERAL DESCRIPTION


The model TLY25/Y39 is a digital controller with microprocessor that is typically used in cooling applications that have temperature control with ON/OFF regulation.

The instrument has 3 relay outputs, two inputs for PTC or NTC temperature probes and a digital input, that can all be configured.

The 2 outputs can be used for controlling the compressor or the temperature control device (OUT1), and the Light switch function (OUT2)

The input for the PTC and NTC temperature probes (which can be selected by parameter) can be used to measure the wall temperature (Pr1)

TLY25

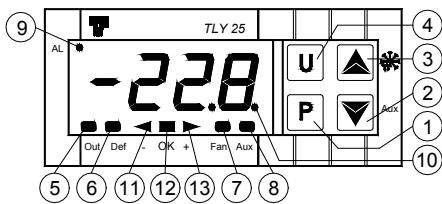

Y39



1 - Key P: Used for setting the Set point and for programming the function parameters

2 - Key DOWN/Aux: Used for decreasing the values to be set and for selecting the parameters. It can also be an Auxiliary output to turn the lights on. **For DD-LCG this Button serves as the light switch.**

3 – UP Key: Used for increasing the set point value

4 - Key U: Used for visualising the temperatures taken by the cell probes and evaporator (Pr1 and Pr2). Also used for turning the Condensing unit **On/Off**, buy push and hold **U** button for 5 seconds.

5 - Led OUT: Indicates the compressor output status (or the temperature control device) on (on), off (off) or inhibited (flashing)

6 - Led DEF: Indicates defrosting in progress (on) or dripping (flashing).

7 - Led FAN: Indicates fan output status on (on), off (off) or delayed after defrosting (flashing)

8 - Led AUX: Indicates AUX output status on (on), off (off) or inhibited (flashing)

9 - Led AL: Indicates the alarm status (on), (off) and silenced or memorized (flashing)

10 - Led SET: Indicates the input in programming mode and the programming level of the parameters. It also serves to indicate the Stand-by status.


11 - Led -: Indicates that a low temperature alarm is in progress (lit) or that a low temperature alarm has been memorised (flashing).

12 - Led OK: Indicates that no alarms are in progress

13 - Led +: Indicates that a high temperature alarm is in progress (lit) or that a high temperature alarm has been memorised (flashing)

OPERATION

HOW TO CHANGE SET POINTS

1. Press the **P**  until sp-1 is displayed.
2. Push **UP ▲** or **DOWN ▼** arrows to change the value.
3. To Exit: wait 20 seconds without pressing a key.

NOTE 1: The set value is stored even when the procedure is exited by waiting the time-out to expire.

NOTE 2: Master-Bilt's SETPOINT is set at a recommended -5 to -10°F at the factory.

NOTE 3: If power is turned off to the unit, wait for at least 2 minutes before power the case back up to prevent from short cycle.

PARAMTERS SET POINTS

DISPLAY SYMBOL	PARAMETER	MASTER-BILT SETTING
SP	Set point	-5°F
D	Differential	5
LS	Low limit Set point	-15°F
HS	High limit set point	+30°F
HA	Hight Temperature Alarm	32°F

ALARM SIGNALS

MESSAGE	CAUSE	OUTPUT
E1	Sensor	Bad Sensor or Sensor got disconnected from the controller.
od	Delay on in progress	Wait for delay cycle end.
HI	Maximum temperature alarm in progress	Output temperature unchanged. Cabinet too warm!
LO	Minimum temperature alarm in progress	Output Unchanged. Cabinet Too cold
AL	Digital input alarm in progress	Lights


CLEANING

WARNING: DO NOT REMOVE FROST WITH A KNIFE, PICK, OR SHARP OBJECTS. DO NOT USE ABRASIVE CLEANERS OR CAUSTIC CLEANERS OR SCOURING PADS


Every 30 to 60 days (depending on frost accumulation), the cabinet should be emptied, warmed up, and wiped down using a solution of 1 teaspoon of baking soda with 1 quart of water. This solution will help eliminate odors. Do not use strong soaps or detergents as they leave odors that can contaminate your product. The **DD** line cabinets are equipped with a floor drain that exits out the lower rear of the cabinet. This exit has a convenient garden hose fitting. If it is not convenient to turn the power off the cabinet, lay a piece of plastic sheeting on the floor of the cabinet and scrape the frost off walls using a plastic scraper. Do not use metal scrapers. This will damage the interior paint of the cabinet.

Lid Removal and Cleaning

The lid can be removed by lifting up and out (see picture). The lid is a high-impact plastic. Wash with warm soapy water or non-abrasive detergent to avoid scratching.

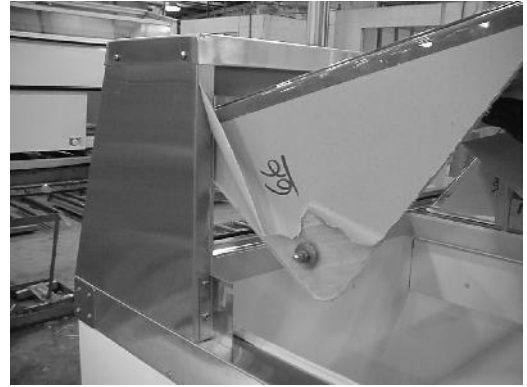


Can Holder Assembly Removal and Cleaning (Optional)

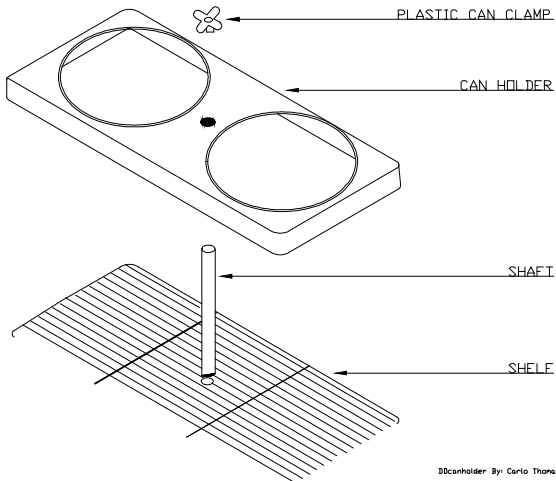

Remove plastic can clamp by screwing knob off the threaded shaft. Wash the can holder and can clamp with a non-abrasive detergent to maintain sanitary gloss. Remove the shaft by loosening the wing nut and unscrewing the shaft from the shelf. Wash the shaft and shelf using a non-metallic brush.

Frost-Shield Removal and Cleaning (optional)

When the frost-shields accumulate approximately ½ to 1 inch of frost (about two to three days), remove it by lifting up to disengage from the keyhole slot. Remove the frost by holding under running water until clean. Dry and replace the frost-shield by engaging screws at the big end of the keyhole and push down.

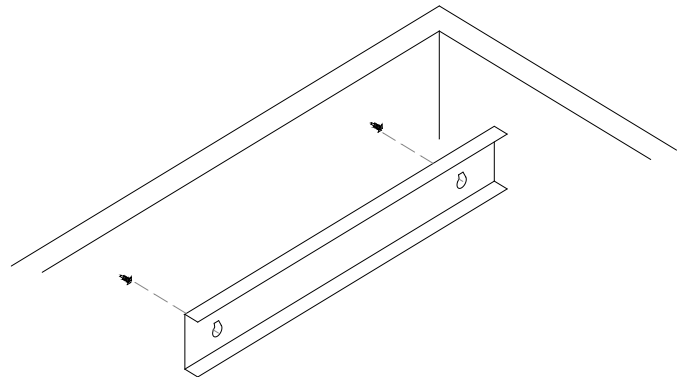

OPERATION CONDITIONS AND PRESSURES

With room ambient temperature of +80 °F and cold cabinet (unit cycling on control):

DD-66 & DD-88 with R-404a

Suction pressure – 6 to 8 psig.

Head pressure – 240 to 260 psig.

If room ambient is low, 60 °F or lower, then the suction pressure could be as low as 4 psig. Temporary block the condenser coil to raise head pressure to 240 psig in order to verify proper charge and a suction pressure of 6psig to 8 psig. Remove blockage after pressure check.

SERVICE INSTRUCTIONS (Trouble Shooting Guide)

1. High head pressure and high back pressure:
 - A. Condenser coil clogged or restricted.
 - B. Condenser fan motor defective.
 - C. Air in the system.
 - D. Refrigeration overcharge.
2. Low back pressure and low head pressure:
 - A. Capillary tube restriction.
 - B. Refrigerant undercharged.
 - C. Leak in system.
 - D. Moisture in system.
3. Pressures normal – cabinet warm:
 - A. Refrigerant undercharged.
 - B. Thermostat set too warm.
4. Compressor starts and runs – but cycles on overload:
 - A. Low voltage.
 - B. Overload protector defective.
 - C. High head pressure (see#1).
5. Compressor will not start – hums, but cycles on overload:
 - A. Low voltage.
 - B. Relay defective.
 - C. Overload defective.
 - D. High head pressure (see #1).
6. Cabinet sweating:
 - A. High ambient humidity.
7. Special service situations

If moisture or liquid is observed around or under a Master-Bilt cabinet, an immediate investigation should be made by qualified personnel to determine the source of moisture or liquid. The investigation made should determine if the cabinet is malfunctioning or if there is a simple housekeeping problem.

Moisture or liquid around or under a cabinet is a potential slip/fall hazard for persons walking by or working in the general area of the cabinet.

Any cabinet malfunction or housekeeping problem that creates a slip/fall hazard around or under a cabinet should be corrected immediately.

MASTER-BILT PART NUMBERS

The table below gives Master-Bilt part numbers. Use this chart when ordering replacement parts for your

Description	DD-46LCG	DD-66LCG	DD-88LCG
LED Lighting kit	23-01740	23-01739	23-01738
Capillary Tube	11-01306	11-01450 (2 REQ)	11-01450 (2 REQ)
Compressor	03-14761	03-14902	03-14902
Condenser Coil	07-13253	07-13296	07-13296
Condenser Fan Blade	15-13093	15-13093	15-13093
Condenser Fan Motor	13-00311	13-00311	13-00311
Condenser Fan Motor Bracket	13-00754	13-00754	13-00754
Condensing Unit			
Drier	09-09171	09-09171	09-09171
Fluorescent Lamp, 18"		23-00329	
Fluorescent Lamp, 36"	23-00325	23-00325	23-00325
Gasket	37-00497	37-00498	37-00499
Glass, Tempered (Curved Glass)	31-02927	31-02926	31-02925
Lid Assembly	062-145A	060-145A	061-145A
Power Switch	19-01090	19-01090	19-01090
Shelf, Wire	33-01413	33-01413	33-01413
Electronic Temperature Control	19-13952 (TLY-25) 19-14205 (Y-39)	19-13952 (TLY-25) 19-14205 (Y-39)	19-13952 (TLY-25) 19-14205 (Y-39)
Wire Harness (126" Power Cord)	21-00524	21-00524	21-00524

Accessories

Description	DD-26(CG)(-L)	DD-46(CG)(-L)	DD-66(CG)(-L)	DD-88(CG)(-L)
Can Holders –Includes White Can Covers	A059-200300	A062-20300	A060-20300	A061-20300
Can Covers Clear White	44-00984 44-00973	44-00984 44-00973	44-00984 44-00973	44-00984 44-00973
Casters Set (4), 3” Dia. Set (6), 3” Dia.	A062-11140	A062-11140	A061-11140	A061-11140
Condiment Holders and Food Pan Display	A059-10650	A062-10650	A060-10650	A061-10650
Individual Containers for Condiment Holders (Clear)	44-01020	44-01020	44-01020	44-01020
Dipper Well w/Installation Kit	A060-20400	A060-20400	A060-20400	A060-20400
Frost Shield (Patented) Master-Bilt Exclusive	A059-11150	A062-11150	A060-11150	A061-11150
Legs 6” leg kit	A062-11170	A062-11170	A061-11170	A061-11170
Lid Locking Kits – Less Locks	A059-11129	A059-11129	A060-11129	A060-11129
DDN Flavor Tags	A062-20225	A062-20225	A062-20225	A062-20225

SALE AND DISPOSAL

OWNER RESPONSIBILITY

If you sell or give away your Master-Bilt cabinet you must make sure that all safety labels and the Installation - Service Manual are included with it. If you need replacement labels or manuals, Master-Bilt will provide them free. Contact the customer service department at Master-Bilt at (800) 684-8988.

The customer service department at Master-Bilt should be contacted at the time of sale or disposal of your cabinet so records may be kept of its new location.

If you sell or give away your Master-Bilt cabinet and you evacuate the refrigerant charge before shipment, Master-Bilt recommends that the refrigerant charge be properly recovered in compliance with section 608 of the Clean Air Act effective November 1995 and in accordance with all applicable local, regional, or national standards.

